



audio-technica

ATH-CC500BT2

Wireless Cartilage Conduction Headphones

User Manual

English

Safety precautions

Although this product was designed to be used safely, failing to use it correctly may result in an accident. To ensure safety, observe all warnings and cautions while using the product.

Cautions for the product

- Do not use the product near medical equipment. Radio waves may affect cardiac pacemakers and medical electronic equipment. Do not use the product inside medical facilities.
- When using the product in aircraft, follow airline instructions.
- Do not use the product near automatic control devices such as automatic doors and fire alarms. Radio waves may affect electronic equipment and cause accidents due to malfunction.
- Do not disassemble, modify or attempt to repair the product to avoid electric shock, malfunction or fire.
- Do not subject the product to strong impact to avoid electric shock, malfunction or fire.
- Do not handle the product with wet hands to avoid electric shock or injury.
- Disconnect the product from a device if the product begins to malfunction, producing smoke, odor, heat, unwanted noise or showing other signs of damage. In such a case, contact your local Audio-Technica dealer.
- Do not allow the product to get wet to avoid electric shock or malfunction.
- Do not put foreign matter such as combustible materials, metal, or liquid in the product.
- Do not cover the product with a cloth to avoid fire or injury by overheating.
- Follow applicable laws regarding mobile phone and headphone use if using headphones while driving.
- Do not use the product in places where the inability to hear ambient sound presents a serious risk (such as at railroad crossings, train stations, and construction sites).
- Do not charge the battery if the terminal of the USB charging cable is bent, loose, or damaged. Doing so may cause heat generation, smoke emission, fire or electric shock.
- Do not charge the product if water or foreign matter is inside the battery jack or USB charging cable. Doing so may cause corrosion, heat generation, smoke, fire, or other malfunction or electric shock in the battery jack or USB charging cable.
- When charging, make sure to use the included USB charging cable.
- Do not charge with devices that have quick-charge functionality (with a voltage of 5 V or more). Doing so may cause the product to malfunction.
- To prevent damage to your hearing, do not raise the volume too high. Listening to loud sound for an extended period may cause temporary or permanent hearing loss.
- Discontinue use if skin irritation results from direct contact with the product.

Cautions for rechargeable battery

The product is equipped with a rechargeable battery (lithium-ion battery).

- If battery fluid gets into eyes, do not rub them. Rinse thoroughly with clean water such as tap water and consult a doctor immediately.

Safety precautions

- If battery fluid leaks, do not touch fluid with bare hands. If fluid remains inside the product, it may cause malfunction. If battery fluid leaks, contact your local Audio-Technica dealer.
 - If fluid gets in your mouth, gargle thoroughly with clean water such as tap water and consult a doctor immediately.
 - If your skin or clothing comes in contact with fluid, immediately wash the affected skin or clothing with water. If you experience skin irritation, consult a doctor.
- To avoid leakage, generation of heat or explosion:
 - Never heat, disassemble or modify the battery, nor dispose of it in a fire.
 - Do not attempt to pierce with a nail, hit with a hammer or step on the battery.
 - Do not drop the product or subject it to strong impact.
 - Do not get the battery wet.
- Do not use, leave or store the battery in the following places:
 - Area exposed to direct sunlight or high temperatures and humidity
 - Inside of a car under the blazing sun
 - Near heat sources such as heat registers
- Charge only with the included USB cable to avoid malfunction or fire.
- The internal rechargeable battery of this product cannot be replaced by the user. The battery may have reached the end of its service life if the usage time becomes significantly shorter even after the battery has been fully charged. If this is the case, the battery needs to be repaired. Contact your local Audio-Technica dealer for repair details.
- When the product is disposed of, the built-in rechargeable battery needs to be discarded properly. Contact your local Audio-Technica dealer to learn how to properly dispose of the battery.

Notes on use


- Be sure to read the connected device's user manual before use.
- This product is not intended for use as a device to improve hearing for people with hearing loss (such as for use as a hearing aid).
- Audio-Technica will not be liable in any way for any loss of data in the unlikely event that such losses should occur while using the product.
- On public transportation or in other public places, keep the volume low so as not to disturb other people.
- Turning the volume up too high may cause sound to leak.
- Minimize the volume on your device before connecting the product.
- When using the product in a dry environment, you may feel a tingling sensation in your ears. This is caused by static electricity accumulated on your body, not by product malfunction.
- Do not subject the product to strong impact.
- Do not bend the product excessively or forcefully change its shape.
- Do not store the product in direct sunlight, near heating devices, or in hot, humid, or dusty places. Additionally, do not allow the product to get wet.
- When the product is used for a long time, the product may become discolored due to ultraviolet light (especially direct sunlight) and wear.
- If the product is placed in a bag while the USB charging cable is still connected, the USB charging cable may become caught, severed, or broken.
- Make sure to hold the plug when connecting and disconnecting the USB charging cable. The USB charging cable may become severed or an accident may occur if you pull on the cable itself.
- When you are not using the USB charging cable, disconnect it from the product.
- When you are not using the product, store it in the included pouch.
- This product can be used to talk on the phone only when using a mobile telephone network. Support for telephony apps that use a mobile data network is not guaranteed.
- If you use the product near an electronic device or transmitter (such as a mobile phone), unwanted noise may be heard. In this case, move the product away from the electronic device or transmitter.
- If you use the product near a radio antenna, noise may be seen or heard in the radio signal. In this case, move the product away from the radio antenna.
- To protect the built-in rechargeable battery, charge it at least once every 6 months. If too much time passes between charges, the life of the rechargeable battery may be reduced, or the rechargeable battery may no longer be able to be charged.
- Charge the product in a well-ventilated place (15 to 35°C (59 to 95°F)) away from direct sunlight. Otherwise, the battery may deteriorate, possibly resulting in shorter periods of continuous use or may fail to charge.
- If the product is wet with sweat, wipe off any moisture with a dry cloth before charging.
- Close the USB cap firmly. Sweat or water may cause malfunction.

About water-resistant (drip-proof) performance

- The product has water-resistant (drip-proof) capabilities equivalent to IPX4.
- Make sure to close the USB cap completely when using the product to maintain water-resistant (drip-proof) performance. If the USB cap is not closed completely, water may enter inside.
- The water-resistant (drip-proof) performance is designed to protect the headphones if they get wet from rain, etc. (equivalent to IPX4). JIS/IEC protection grade IPX4 means that the product is protected against exposure to flying water from all directions.
- The headphones cannot be used underwater.
- The headphones cannot be used in hot and humid places, such as bathrooms.
- The headphones are not waterproof. Submerging them in water may cause damage.
- The product may not function properly if it becomes wet. Wipe the product with a dry cloth, shake it multiple times to remove any excess water, and allow it to dry thoroughly before use.

For a more comfortable Bluetooth communication experience


The effective communication range of this product varies depending on obstructions and radio wave conditions. For a more enjoyable experience, please use the product as close as possible to the Bluetooth device. To minimize noise and sound disruptions, avoid placing your body or other obstacles between the product's antenna (L side) and the Bluetooth device.

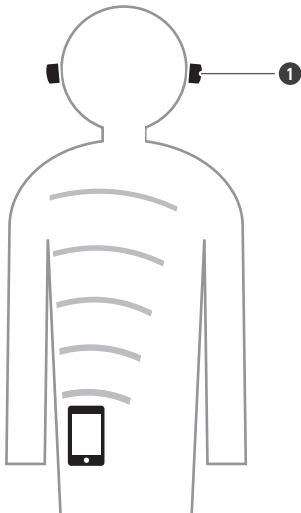

1 Antenna

Part names and functions

Main unit

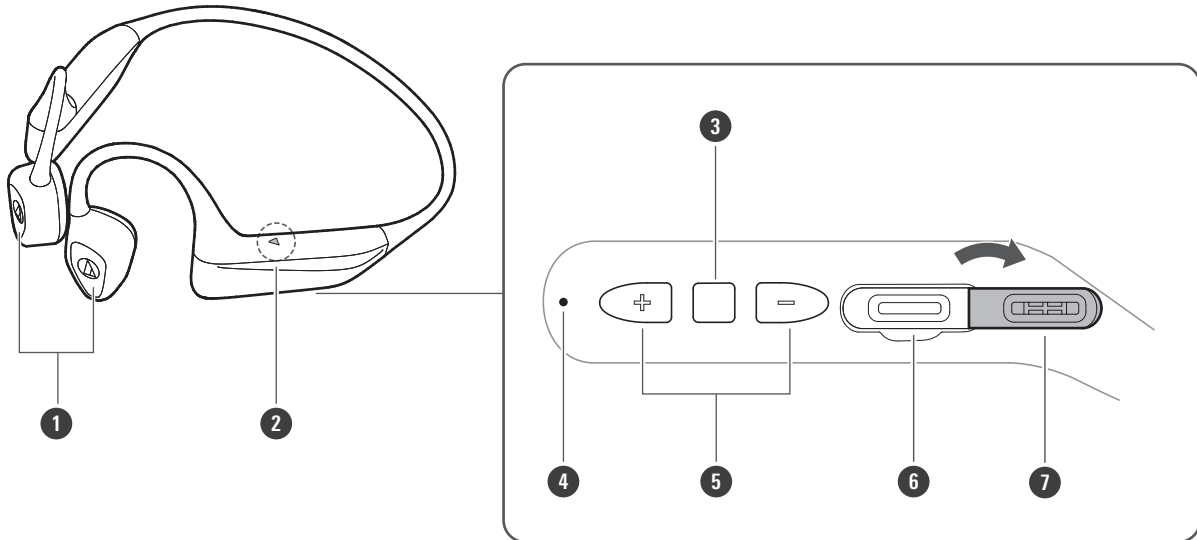

1 **Vibration driver**

2 **Indicator lamp**

Displays the operating status and battery level of the product.

3 **Power supply / multifunction button**

Use to turn the power supply ON/OFF, play/pause music, and answer phone calls.

4 **Microphone**

5 **Volume button**


Use to adjust the volume up or down (+/-).

6 **Battery jack**

Use to connect the included USB charging cable and charge the product.

7 **USB cap**

Accessories

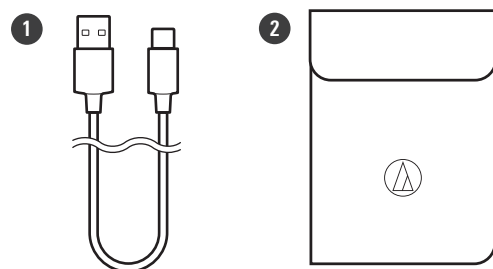

1 **USB charging cable (30 cm (12"), USB Type-A / USB Type-C™)**

2 **Pouch**


Charging the battery

- Fully charge the battery when using for the first time.
- When the rechargeable battery is running low, the voice guidance will play the message “Low battery”, and the indicator lamp will change to red. Charge the battery as soon as possible.
- It takes about 2 hours to charge the battery fully. (This time may vary depending on usage conditions.)
- Charge the product in a well-ventilated place (15 to 35°C (59 to 95°F)) away from direct sunlight. Charging outside the normal charging temperature range may result in failure to charge or longer charging time. Otherwise, the battery may deteriorate, possibly resulting in shorter periods of continuous use or may fail to charge.

1 Open the battery jack USB cap.

2 Connect the included USB charging cable (USB Type-C side) to the battery jack.

- The included USB charging cable is designed for exclusive use with the product. Do not use any other USB charging cable.
- When inserting the USB charging cable into the USB port or battery jack, insert it directly (horizontally).

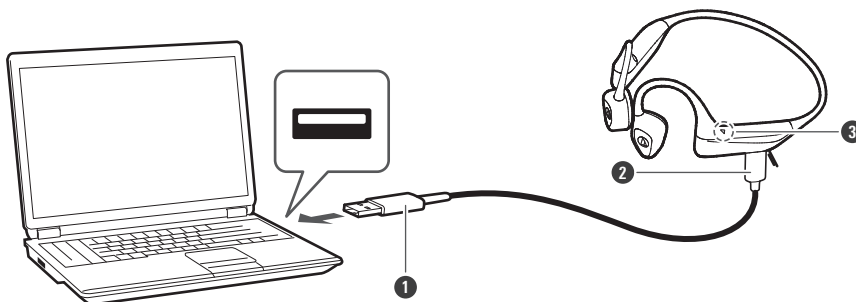

- ① USB Type-A
- ② USB Type-C
- ③ Indicator lamp

3 Connect the included USB charging cable (USB Type-A side) to the computer to start charging.

- While charging, the indicator lamp lights as follows. (It may take several seconds for the indicator lamp to light.)

Indicator lamp	Status
Lit red	Charging
Off	Charging complete

4 When charging is complete, disconnect the USB charging cable (USB Type-A side) from the computer.

5 Disconnect the USB charging cable (USB Type-C side) from the product's battery jack.



- If you start to charge while the product is on, it will automatically turn off.

Charging the battery




- When charging, make sure to use the included USB charging cable. The product may not charge with cables other than the included USB charging cable.
- Always make sure the headphones are not wet before charging. Wipe the headphones with a dry cloth, shake them multiple times to remove any excess water, and allow the headphones to dry thoroughly before charging.

Power supply ON/OFF

Turning on the product

- 1 Press and hold the power supply / multifunction button (about 2 seconds).

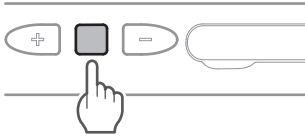


» The indicator lamp lights in white, and then flashes.



- It may take several seconds for the indicator lamp to light.

Turning off the product

- 1 Press and hold the power supply / multifunction button (about 2 seconds).

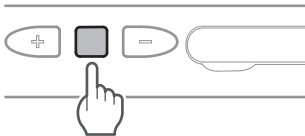

» The indicator lamp lights in white, and then turns off.

Connecting via Bluetooth

To connect the product to a Bluetooth device, the product needs to pair (register) with the device.

Pairing a Bluetooth device

- Read the user manual for the Bluetooth device.
- Place the Bluetooth device within 1 m (3.3') of the product to perform pairing correctly.
- Wear the product to hear voice guidance during pairing.

1 Starting with the product turned off, turn it on.


- The indicator lamp will light in white, and then flash in white.

2 Use your Bluetooth device to begin the pairing process and search for the product. When your Bluetooth device finds the product, "ATH-CC500BT2" will be displayed on the device.

- For information about using your Bluetooth device, refer to the device's user manual.

3 Select "ATH-CC500BT2" to pair the product and your Bluetooth device.

- Some devices may ask for a passkey. In this case, enter "0000". The passkey may also be called a passcode, PIN code, PIN number, or password.

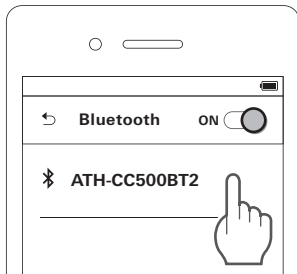

» The voice guidance will play the message "Connected", and the indicator lamp will turn off. This indicates pairing was performed correctly and is now complete.



- See "Voice guidance" (p. 19) for more information on voice guidance.

About pairing

When connecting a new Bluetooth device, you need to pair it with the product. Once the Bluetooth device and the product are paired, you do not need to pair them again. The product supports multipairing, in which a connection history is saved. However, in the following cases you will need to pair again even if the Bluetooth device was paired once:

- If the product is deleted from the Bluetooth device's connection history.
- If the product is sent out for repair.
- If the product is reset.

Multipoint function

The product supports multipoint, which allows two Bluetooth devices to be connected at the same time. While you are listening to music with one device, you can answer a call that comes in from the other device. It is convenient if you have two smartphones, for example.

- Audio-Technica does not guarantee the operation of all combinations of Bluetooth devices.

Connecting using multipoint


- 1** Pair with the first Bluetooth device.
- 2** After pairing with the first device, turn off its Bluetooth feature.
- 3** Pair with the second Bluetooth device.
- 4** Turn on the Bluetooth feature of the first Bluetooth device.




- If the product does not connect, restart its power.
- Up to two Bluetooth devices can be connected at the same time with multipoint. To connect a third Bluetooth device, disconnect one of the connected devices.

Wearing the product

- 1** Place the product over your ears from behind your head.

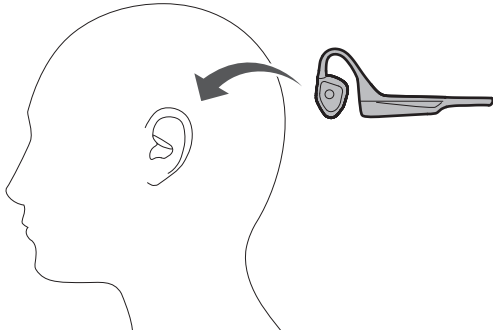

- 2** Adjust the position so that the vibration drivers are placed against the cartilage of your ears.

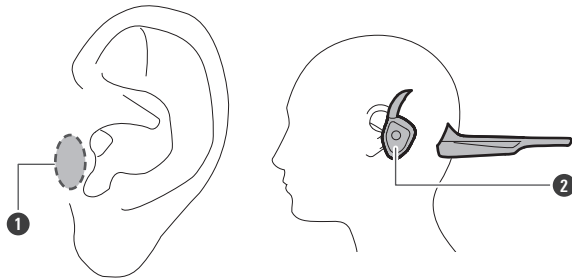

- 1** Cartilage
- 2** Vibration driver

Using the product

The product can use Bluetooth wireless technology to connect to your device and play music, receive phone calls, etc. Use the product for whichever of these purposes suits your needs. Note that Audio-Technica cannot guarantee the operation of displays, such as the battery level display, or applications via Bluetooth devices.


Listening to music

- To connect for the first time, pair the product and your device via Bluetooth wireless technology. If you have already paired the product and your Bluetooth device, turn on the Bluetooth device's Bluetooth connection before turning on the product.
- Use your Bluetooth device to start playback, referring to the device's user manual as necessary.

1 Turn on the product, connect to the Bluetooth device, and place the product on your ears.


2 Start music playback on your Bluetooth device.

3 Adjust the volume by pressing the volume buttons (+/-).

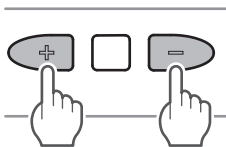


4 Press the power supply / multifunction button to stop playback.

- Playback will be started or stopped with every press.

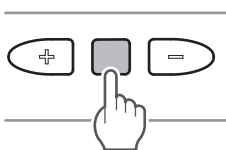

Power supply / multifunction button operation

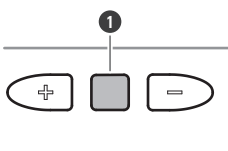


1 Power supply / multifunction button

Using the product

Operation	Function
Press	Starts or pauses playback.
Press (twice)	Depending on the connected device, activates the device's speech recognition function (such as Siri for compatible iOS devices).

- The controls explained above may not be available on some smartphones.

Volume button operation

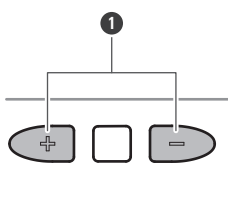

- 1 Volume button

Operation	Function
Press	Increases/decreases the volume by 1 level. ^[1] ^[2]
Press and hold (for about 2 seconds)	Plays the next track. Plays the previous track / returns to the start of the track.

[1] The voice guidance will play the message "Max" or "Minimum" when the volume is at the maximum or minimum level.

[2] The volume control of some Bluetooth devices may not work well with the product.

- The controls explained above may not be available on some smartphones.

Talking on the phone

If your Bluetooth device supports telephone features, you can use the product to talk on the phone.

1 Turn on the product, connect to the Bluetooth device, and place the product on your ears.


2 Make/receive calls with your Bluetooth device.

- When your Bluetooth device receives a phone call, the product sounds a ringtone.
- If a call is received while you are listening to music, music playback is paused.

3 To receive a call, press the power supply / multifunction button.


4 Adjust the volume by pressing the volume buttons (+/-).

Using the product

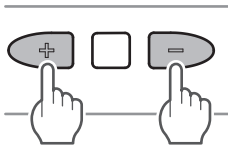


5 Press the power supply / multifunction button to end a call.

- If the call was received while listening to music, playback is resumed.
- Music playback may not be resumed on some Bluetooth devices. In this case, music playback must be started manually.

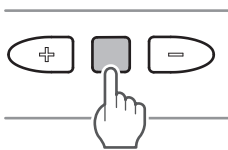

- Not wearing the product properly while talking on the phone may cause your voice to be too quiet for others to hear.

Power supply / multifunction button operation

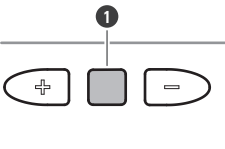


1 Power supply / multifunction button

Operation	Function
Press	Receiving a call: Answers the call. Making a call: Cancels the call. During a call: Ends the call.
Press and hold (for about 2 seconds)	Receiving a call: Rejects the call.

- The controls explained above may not be available on some smartphones.

Volume button operation

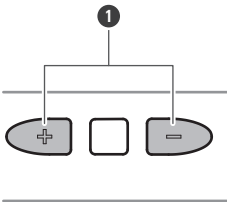

1 Volume button

Operation	Function
Press	Increases/decreases the call volume by 1 level.

- The controls explained above may not be available on some smartphones.

Speech recognition feature

Activation of the speech recognition feature (such as Google Assistant or Siri) may be possible depending on your device.

1 Press (twice) the power supply / multifunction button.

» The speech recognition feature (such as Google Assistant or Siri) is activated.

Auto power off function

The product automatically turns off after 5 minutes of not being connected to a device.

App for smartphones

This product is compatible with our "CONNECT" app. The app gives you convenient access to various functions. It also allows you to update the product's firmware.

<https://app.at-globalsupport.com>



CONNECT App
iOS, Android

What you can do with the app

The app allows you to use the following functions. For details, refer to the app screen.

Function	Description
Equalizer	You can change the equalizer settings. It also has a function to reduce sound leakage from headphones.
BGM Mode	You can enjoy the sounds in a comfortable space, like the background music playing in a cafe.
Soundscape	You can download and play relaxing nature sounds designed for improving sleep and calmness, masking noises to enhance concentration, and healing sounds for refreshing your mind and body or meditating.
L/R Balance Adjustment	You can adjust the left-right volume balance.
Voice Guidance	You can change the language of the voice guidance played by the product.
Connected Device Management	You can switch the connection by selecting the Bluetooth device you want to connect from the list of Bluetooth devices you have connected to so far.
Out of Range Alert	Alerts can be used to notify users if this Bluetooth-connected product is separated from the Bluetooth device.

Indicator lamp display

The indicator lamp of the product indicates the product's status.

Pairing

Status	Indicator lamp display pattern
Searching for devices	○ – ○ – ○ . . . Flashing white


Connecting

Status	Indicator lamp display pattern
Connecting	— — — — — . . . Off

Battery level

Status	Indicator lamp display pattern
Battery level is low	White in the pairing turns red.

Charging

Status	Indicator lamp display pattern
Charging	 . . . Lit red
Fully charged	— — — — — . . . Off

Voice guidance


The product plays English voice guidance in the following situations.

Situation	Voice Guidance
Bluetooth is connected	Connected
Bluetooth is disconnected	Disconnected
Battery level is low	Low battery
Battery is discharged and power will be turned off	Please recharge
Maximum volume	Max
Minimum volume	Minimum

Cleaning

Get into the habit of regularly cleaning the product to ensure that it will last for a long time. Do not use alcohol, paint thinners, or other solvents for cleaning purposes.

- Use a dry cloth to clean the headphones. Wipe the headphones with a dry cloth, shake them multiple times to remove any excess water, and allow the headphones to dry thoroughly before use.
- Immediately wipe off any moisture such as sweat that has splashed onto the battery jack or other areas of the product. Failure to do so may result in a malfunction due to corrosion.
- If any moisture remains in the holes near the microphones (see figure), place the headphones on a dry cloth and shake several times to remove any moisture, and then allow the headphones to dry thoroughly before use.
- Wipe away any perspiration or dirt from the USB charging cable with a dry cloth immediately after use. Failure to clean the cable may cause it to deteriorate and harden over time, resulting in malfunction.
- If the USB terminal of the charging cable is dirty, wipe it off with a dry cloth.

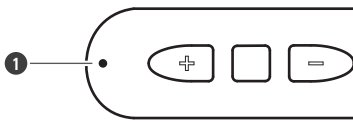

1 Microphone




- If the product will not be used for an extended period of time, store it in a well-ventilated place free from high temperatures and humidity.

Forced pairing mode / reset

If the product does not connect to a device (forced pairing mode)

If pairing cannot be cancelled, you can use forced pairing mode to perform pairing again.

- 1** With the product connected to the Bluetooth device, press and hold (about 10 seconds) the volume buttons (+/-) at the same time.

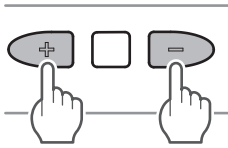


» The product will switch to the "searching for devices" (pairing mode) state and you will be able to pair it with your desired Bluetooth device.

If the product operates abnormally (reset)

Reset the product.

- 1** With the product charging, press and hold (about 10 seconds) the volume buttons (+/-) at the same time.

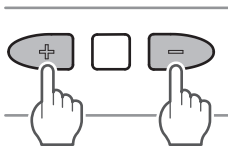

» The indicator lamp will flash white when the reset is complete.

- 2** Remove the product from the list of registered devices on your Bluetooth device.
- 3** Pair the product again.

Troubleshooting

? Power is not supplied

- Charge the product.

? Unable to pair

- Confirm that the Bluetooth device communicates using Ver. 2.1+EDR or higher.
- Place the product and the Bluetooth device within 1 m (3.3') of each other.
- Set the profiles for the Bluetooth device. For procedures on how to set profiles, refer to the Bluetooth device's user manual.
- Remove the pairing information for the Bluetooth device then pair the product with this device again.
- Make sure you are not connected to any other previously connected Bluetooth device. If so, disconnect the product from the previously connected Bluetooth device, and then select the product on the Bluetooth device you would like to connect to. Use forced pairing mode if you are unable to disconnect from a previously connected Bluetooth device. For details, refer to "If the product does not connect to a device (forced pairing mode)" (p. 21).
- Reset the product if it cannot be unpaired, connected, or does not operate as expected even after trying all other solutions. For details, refer to "If the product operates abnormally (reset)" (p. 21).

? No sound is heard / Sound is faint

- Turn on the power of the product and the Bluetooth device.
- Turn up the volume on the product and the Bluetooth device.
- Make sure that the product and Bluetooth device are connected by the A2DP (or audio connection).
- Disable pairing for the product and the Bluetooth device, then pair the product with this device again.
- Move away from obstacles between the product and the Bluetooth device, such as people, metal, or walls, and place the product and device closer together.
- Switch the sound output of the Bluetooth device to the product.
- Wear the product properly.

? Sound is distorted / Noise is heard / Sound cuts out

- Turn down the volume on the product and the Bluetooth device.
- Keep the product away from devices that emit radio waves such as microwaves and wireless routers.
- Keep the product away from TVs, radios, and devices with built-in tuners. These devices can also be affected by the product.
- Turn off the equalizer settings of the Bluetooth device.

- Remove obstacles between the product and the Bluetooth device and place them closer together. For details, refer to "For a more comfortable Bluetooth communication experience" (p. 5).

Cannot hear the voice of the caller / Voice of the caller is too quiet

- Turn on the power of the product and the Bluetooth device.
- Turn up the volume on the product and the Bluetooth device.
- Confirm that the product and Bluetooth device are connected via HFP/HSP (or phone connection).
- Disable pairing for the product and the Bluetooth device, then pair the product with this device again.
- Switch the sound output of the Bluetooth device to the product.
- Wear the product properly.

My voice is too quiet for others to hear

- Wear the product properly. Not wearing the product properly while talking on the phone may cause your voice to be too quiet for others to hear.

The product cannot be charged / Charging takes too long

- Confirm that the product is connected directly to the computer and not to a USB hub or other intermediate device.
- Charging may not be possible with some computers. Use a different computer or a commercially available USB power adapter.
- Securely connect the included USB charging cable and charge the product.
- Charge the product in a well-ventilated place (15 to 35°C (59 to 95°F)) away from direct sunlight.



- For details about how to operate your Bluetooth device, refer to the device's user manual.

Specifications

Headphones

Sensitivity	100 dB ^[1]
--------------------	-----------------------

Microphones

Type	MEMS type
Polar pattern	Omnidirectional
Sensitivity	-37 dBFS (94 dB SPL, at 1 kHz)
Frequency response	25 to 22,000 Hz

Communication specifications

Communication system	Bluetooth version 5.3
Maximum RF output	10 mW EIRP
Maximum communication range	Line of sight - approx. 10 m (33')
Frequency band	2.402 GHz to 2.480 GHz
Modulation method	GFSK, Pi/4DQPSK, 8DPSK
Spread spectrum method	FHSS
Compatible Bluetooth profiles	A2DP, AVRCP, HFP
Supported codec	AAC, SBC
Supported content protection method	SCMS-T
Transmission band	20 to 20,000 Hz

Other

Power supply	DC 3.7 V lithium ion battery
Charging time	Approx. 2 hours ^[2]
Operating time	Continuous transmission time (music playback): Max. approx. 20 hours ^[2] Call duration: Max. approx. 10 hours ^[2]
Weight	Approx. 32 g (1.1 oz)
Water-resistant (drip-proof) performance	IPX4
Operating temperature	5°C to 40°C (41°F to 104°F)
Accessories	USB charging cable (30 cm (12")), USB Type-A / USB Type-C, Pouch

[1] Based on an in-house measurement environment.

Specifications

[2] The figures above depend on operating conditions.

- For product improvement, the product is subject to modification without notice.

Trademarks

- The **Bluetooth**[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Audio-Technica Corporation is under license. Other trademarks and trade names are those of their respective owners.
- USB Type-C[™] is a trademark of USB Implementers Forum.
- Siri is a trademark of Apple Inc. registered in the United States and other countries.
- Google and Android are trademarks of Google LLC.

株式会社オーディオテクニカ

〒194-8666 東京都町田市西成瀬2-46-1
www.audio-technica.co.jp

Audio-Technica Corporation

2-46-1 Nishi-naruse, Machida, Tokyo 194-8666, Japan
www.audio-technica.com
©2024 Audio-Technica Corporation
Global Support Contact: www.at-globalsupport.com